



devin v1.60
Operating Manual
Edition 17.01.2018

Manual

Kinds of Application..... 1

Functionality 2

Configuration 3

devinHID..... 6


Kinds of Application

The Android app **devin** together with Android app **aiBrowser** enables the data scanned by barcode or RFID readers to be transferred to the input fields of apps and web-based applications in an elegant and simple way. The following overview lists the options and the settings to be made in devin.

Type of application	Possibilities of barcode/RFID data transfer by appropriate configuration of devin
<p>Existing app i.e. the source code is not available and therefore there is no way to change the app.</p>	<p>Data transfer must be done in the keyboard buffer. devin must be configured manually. Further settings such as, e.g. the barcode types to be accepted must be set manually in devin.</p>
<p>Self developed app i.e. the source code is available and therefore the possibility exists to change the app.</p>	<p>The data can be transferred in the keyboard buffer (no additional programming required) or via broadcast. Broadcast provides e.g. The ability to manipulate or intercept the received data before it is inserted into an input field. devin can be configured by the app. For example, The barcode types to be accepted can be set.</p>
<p>Web-based application is executed in a browser by calling a URL.</p>	<p>The aiBrowser from aitronic was developed for the barcode/RFID data transfer in web-based applications. Data transfers must be done by broadcast. devin must be manually configured for this. Further settings such as, e.g. the barcode types to be accepted must be set manually in devin.</p>
<p>Windows application on a PC</p>	<p>The scanned data can be transmitted by devin via Wifi and written directly to the cursor position on the PC using the devinHID Windows Keyboard Server.</p>


Functionality

devin allows the transfer of the scanned barcode scanner or RFID reader data to the keyboard buffer or the clipboard. Alternatively, a broadcast message is possible. Thus, the bar code scanner and RFID reader can serve as a data source for each app. Together with the devinHID Windows application, devin can also write the scanned data directly into the input fields of a Windows application.

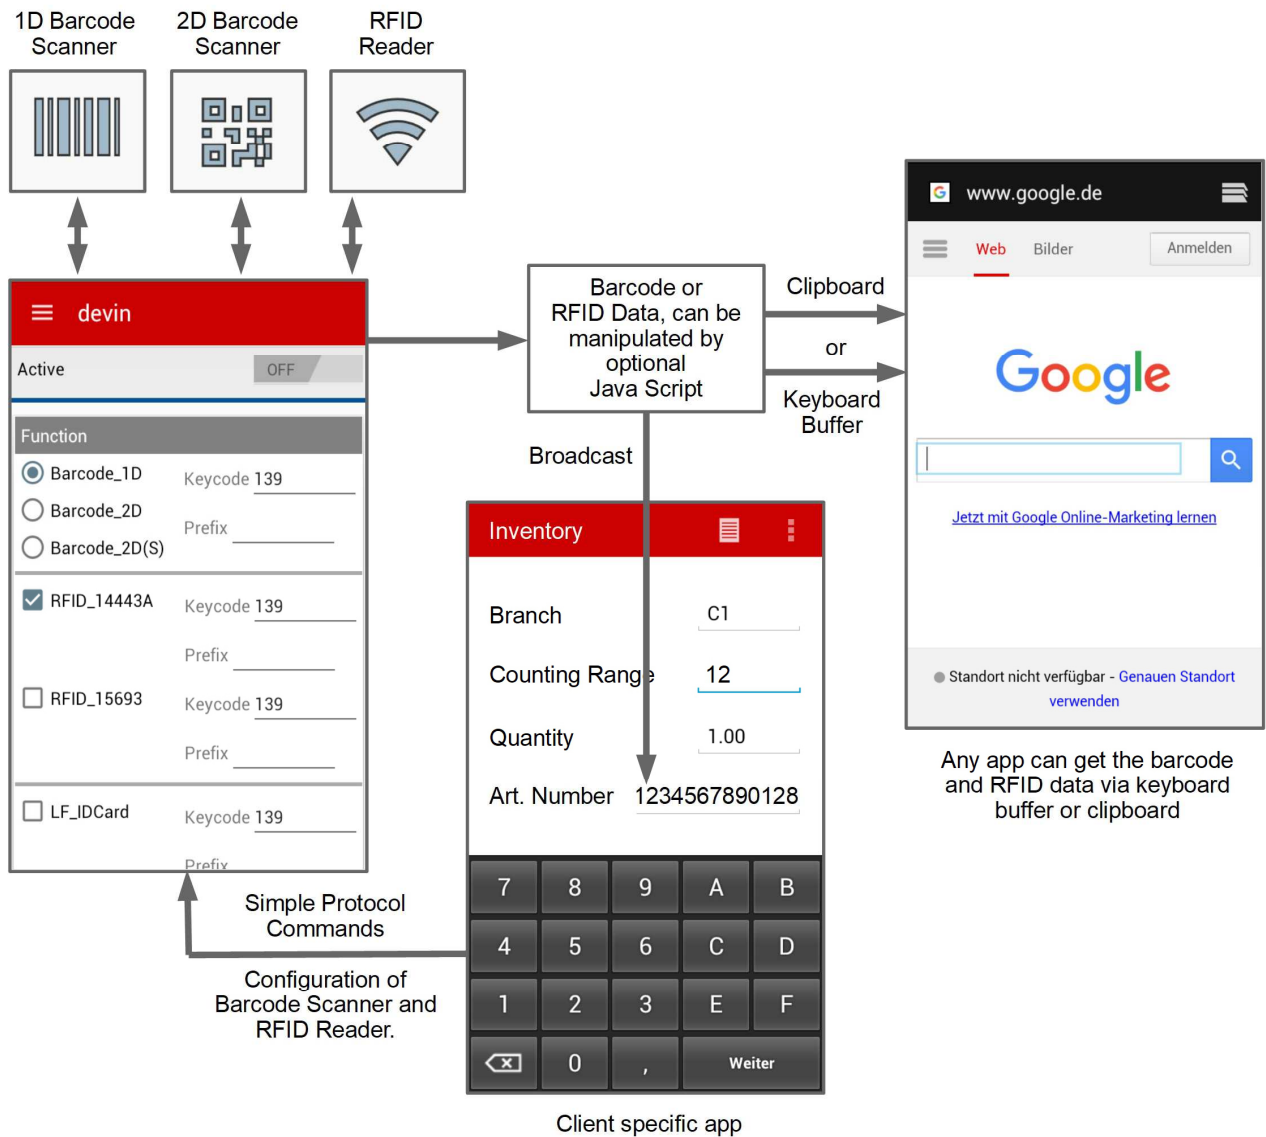

The next pages contain **devin's** user interface description. Only the options for the available hardware are shown. For example, when there is **no** RFID module **no** RFID options are displayed.

Configuration

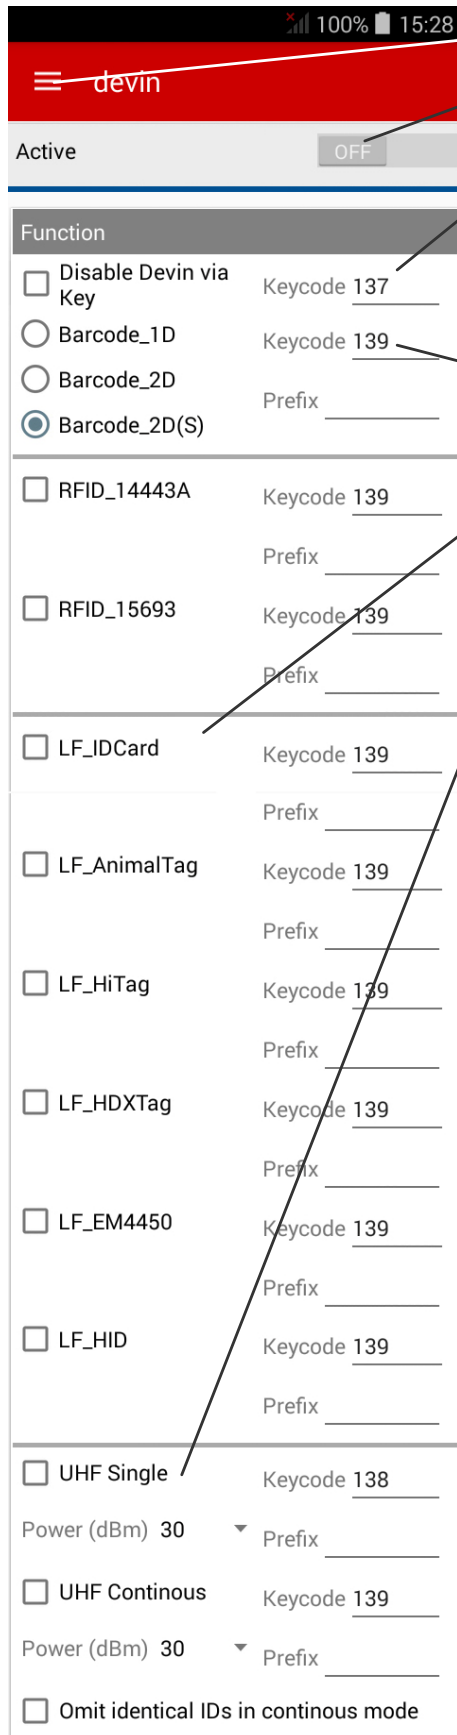

Menu (refer to next page)

After adjustments made devin has to be activated here. With devin activated no setting can be changed.

Function button that can be used to disable devin to use the camera. As soon as one of the devin-defined scan buttons is pressed, the activation of devin is activated again.

Barcode scanner or RFID reader can be activated. If bar code scanner **and** RFID reader are used, **different** key codes have to be used.

Each input device can be activated separately. To each input device a key code (this can alternatively be entered on the numeric input directly with the desired key) and a prefix can be assigned.

UHF Settings

- UHF Single: UHF reader is switched off in each case, after reading a tag.
- UHF Continuous: UHF reader remains turned on for reading multiple tags as the button is pressed.
- Omit identical IDs in continuous mode: In continuous mode, the multiple reading of identical tags is prevented.

With the drop-down lists "Power", the respective transmit power can be adjusted.

Processing

Keyboard buffer

Clipboard

Broadcast (de.aitronic.SCAN_DATA)

WIFI (AutoHotKey)

IP/Hostname

Socket port

Extras

Prefix

Suffix

End mark

Enter

TAB

Scanner settings

Output as Toast Message

Extended info in Toast

Allow apps to remote access settings

Stop scan with release of key

Suppress all devin sounds

Use JavaScript converter

If bar codes or RFID tags are transferred from conventional apps, the keyboard buffer is to be selected. That means that barcodes and transponder tag IDs appear as keyboard input for the app.

The scanned data can be transmitted via Wifi and written directly to the cursor position on the PC using the Windows keyboard server **devinHID**.

These prefix and suffix apply to all input devices.

The passed string can be completed with ENTER or TAB. **Note:** Some Web browsers convert the TAB to spaces. The aiBrowser, on the other hand, goes to the next focusable element.

Scanned data can be output as a message.


Information on the read barcode / RFID type may be issued with in the message.

This allows customer-specific apps to change the settings of devin (refer to **devin Programming Manual**).

If no bar code read and this option is enabled, the scanner turns off when you release the button, if the other switches off after a timeout.

devin sound output can be suppressed.

Barcode and RFID data can be manipulated via JavaScript (refer to **devin Programming Manual**).

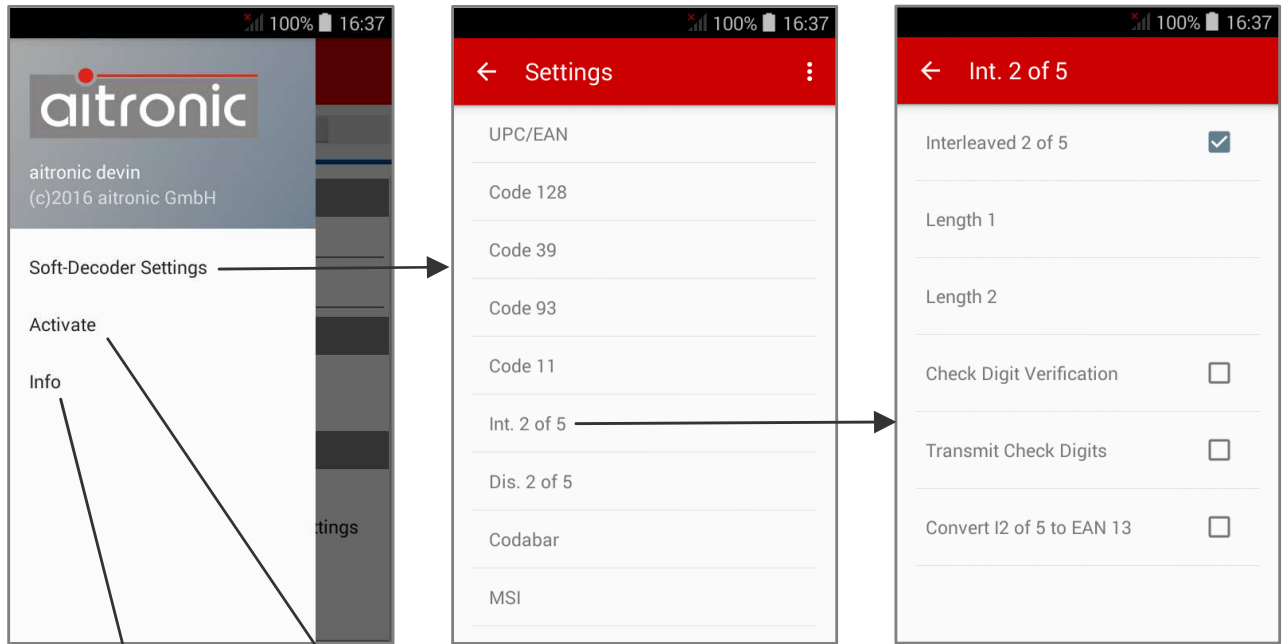


Menu

For the barcode reader type "Barcode_2D (S)" for each type of barcode various parameters can be set. For example it is very important for Code 2 of 5 int. to specify a length fixing, if no check digit is used.



With this button updates can be searched for.

This button can be used to reset the setting to the default values.

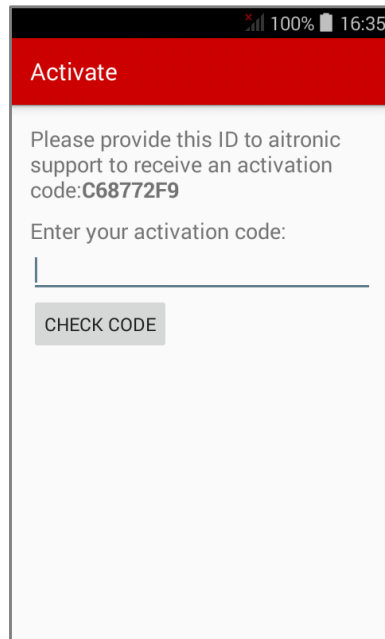


Before devin can be used, activation has to be performed.

devinHID

devinHID can be used to send data from an aitronic LogiScan device via WLAN directly to the PC. **devinHID** writes the received data to the current position of the cursor or the currently focused element. So you can use data, e.g. Write directly into an Excel spreadsheet or similar.

The Android devin app on the aitronic LogiScan devices and the Windows application **devinHID** work together via LAN / WLAN, so both devices must be able to reach each other via the network. When starting **devinHID** on the Windows PC, you can define a port number where **devinHID** should listen to data.

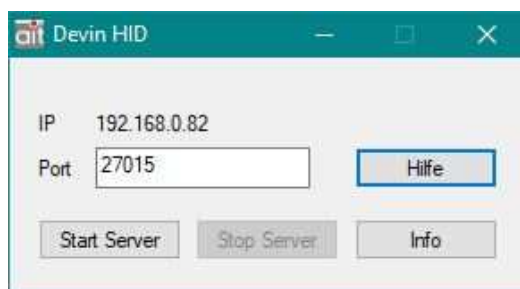

In the Android app **devin**, you must then configure the connection to **devinHID**. To do this, set the value "Processing" to "WIFI" and enter both the IP or host name of the PC on the **devinHID**, as well as the port on which **devinHID** is listening.

If a connection is not possible, you must adjust the firewall settings under Windows accordingly.